

NUCRAFT

Installation Instructions

ID: Ascari Conference

Before Beginning Installation

- Read through the entire instruction thoroughly
 - A minimum of 2 persons is required for this assembly
 - These instructions represent a typical Ascari Conference table build specified with Panel Bases and Power Drawers.
 - Your table may differ slightly depending on the base style and power options.
-
- Ascari Conference tables utilize hardware of various lengths. It is critical to use the correct screw during the correct step to avoid damage to the top.



2.5"



1.75"




1.5"




1.5"

Ascari Conference

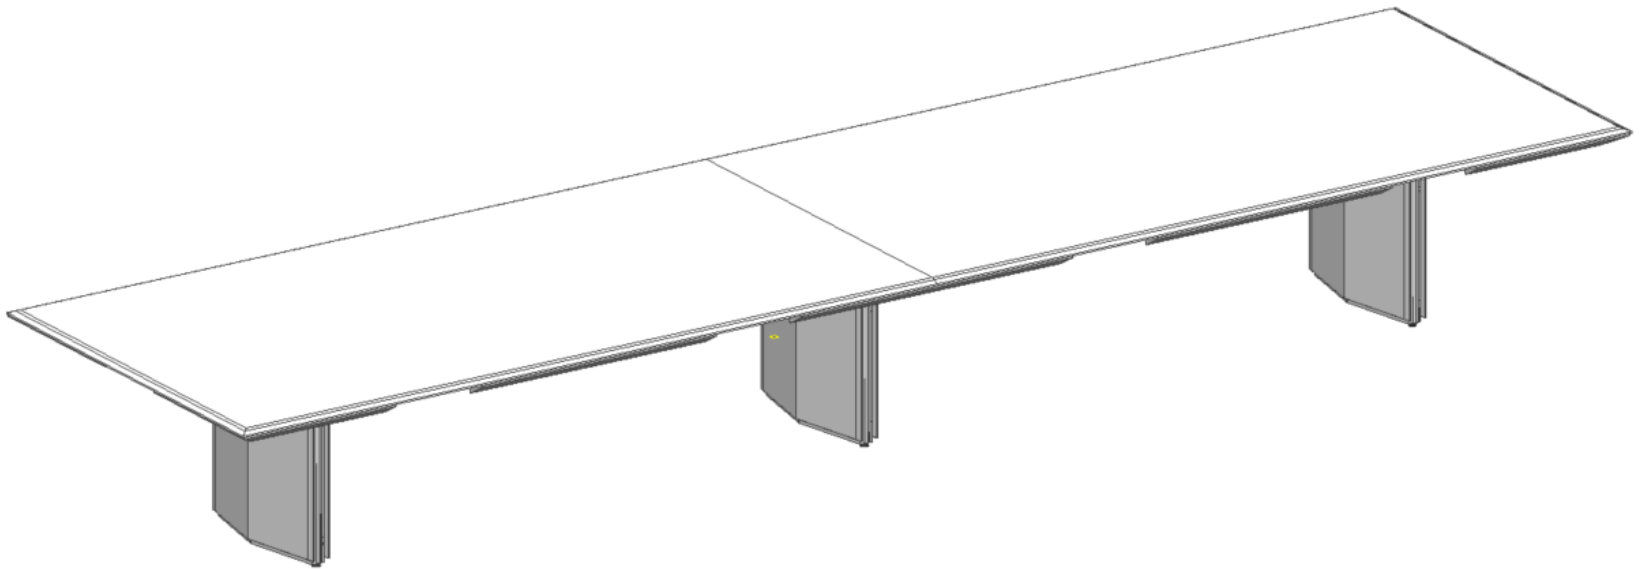


Exploded View


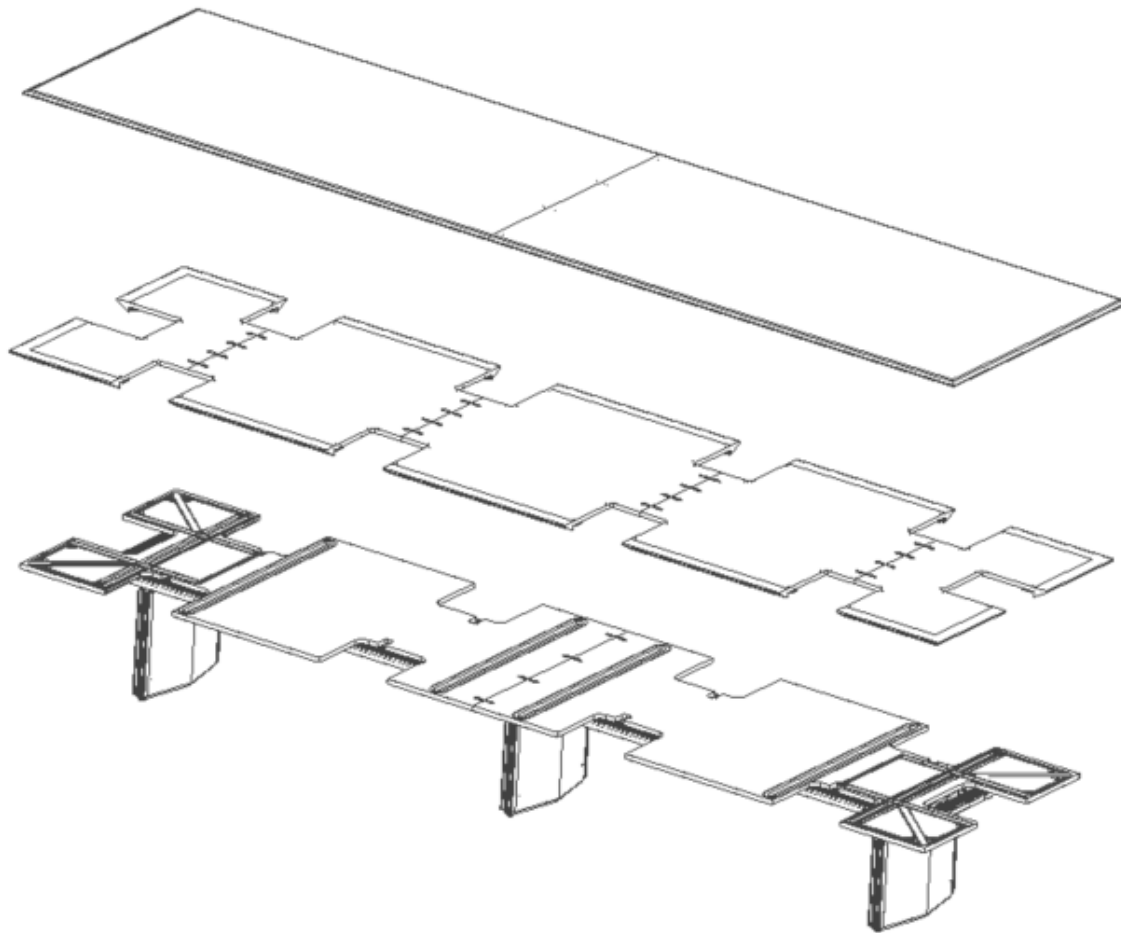


Assembling Base

- Bases can come pre-assembled in various stages.
- Match beams and bases to their labeled locations.
- Ensure end bases line up with silver mark on beams.
- Attach center bases and beams (if applicable).
- Ensure base is level length and width wise. Adjust glides and beams if necessary.

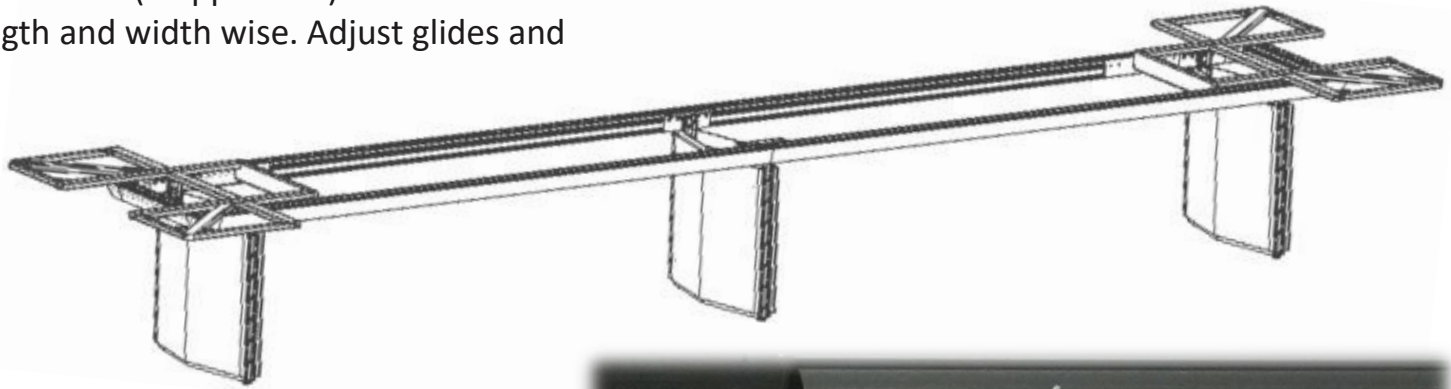


Beams slide on bars

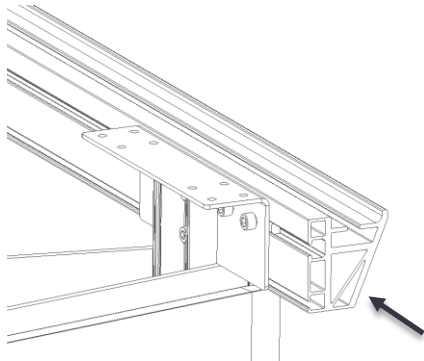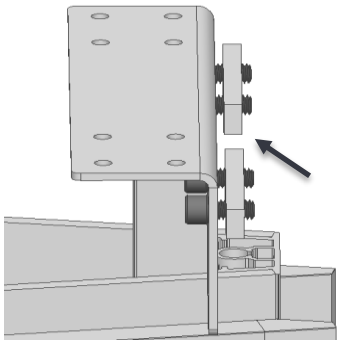

Marked Locations for End Bases



Installing Lower Sub Top

- Place lower sub top pieces on base. Join with dog bone fasteners if necessary.
- Center lower sub top on base.
- Install Yellow screws into black L-Brackets to secure lower sub top into position.

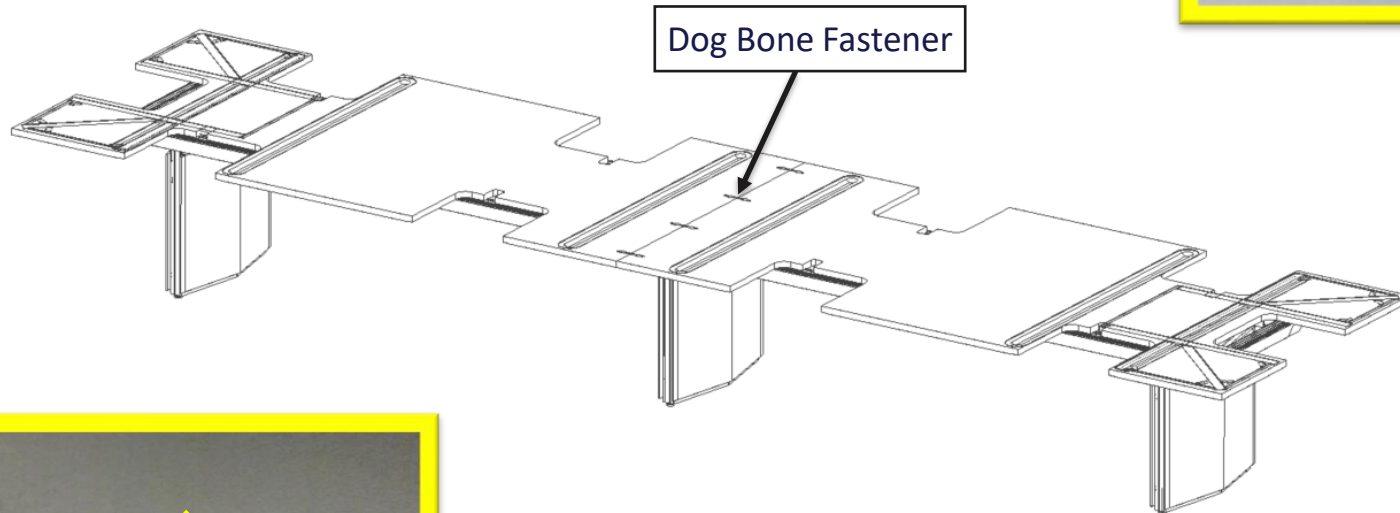


Installing Upper Sub Top

- Place upper sub top on top of base and join using dog bone fasteners.
- Secure upper sub top to base by installing green screws from the top of the table into the marked locations.

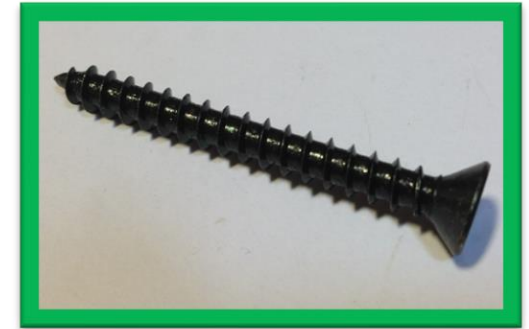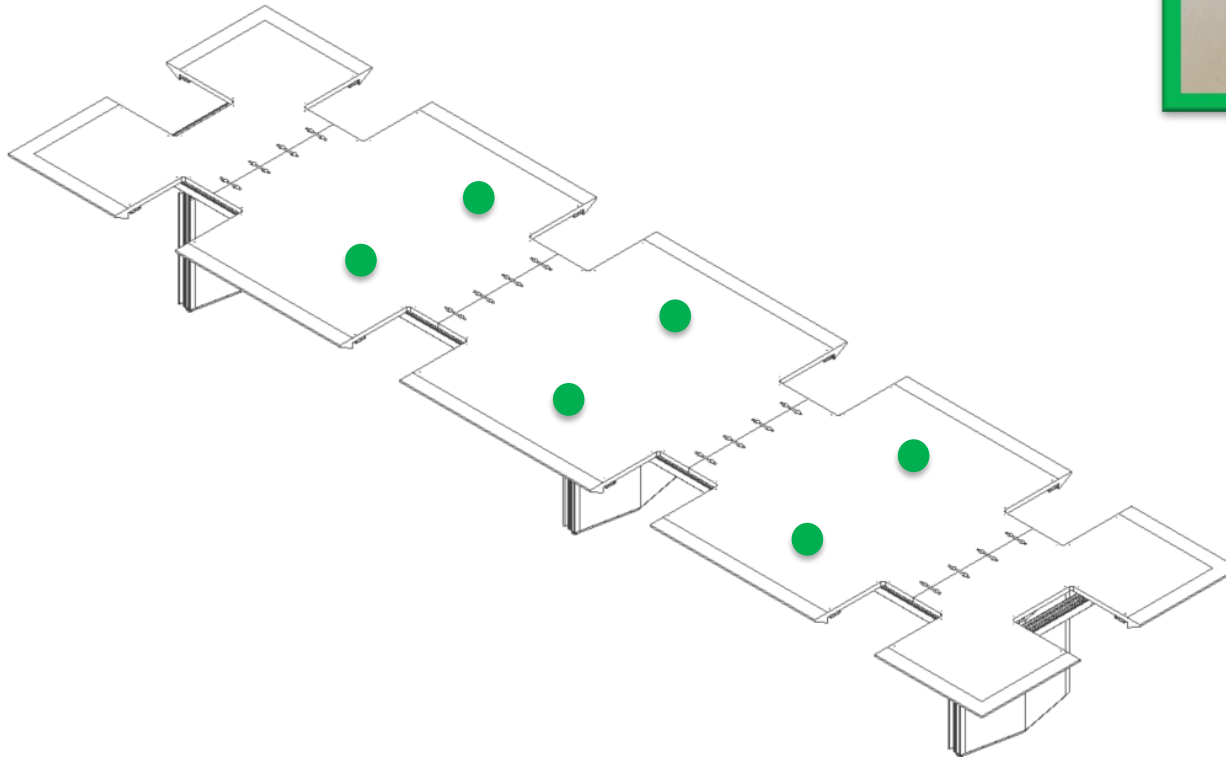



Installing Power Drawers (optional)

- If specified, attach the drawers that are located at the seams of the sub tops. Follow the numbered locations.

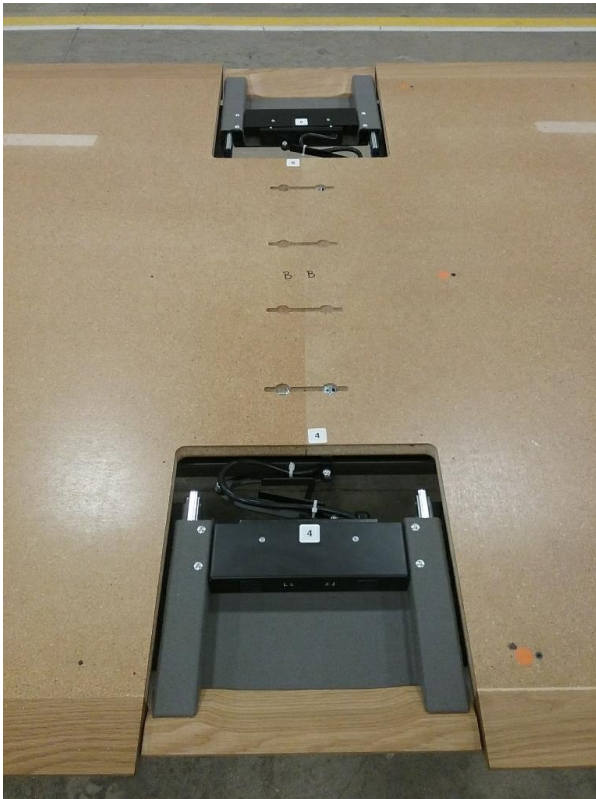

Placing and Connecting Veneer Top

- Place veneer top on sub top.
- Slide top back and forth to access mini fix connections on underside of top.
- Join top pieces together with pins and cams using a Phillips screwdriver.
- Center veneer top evenly on top of sub top.

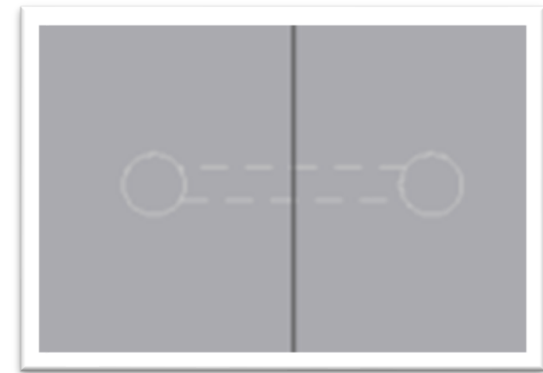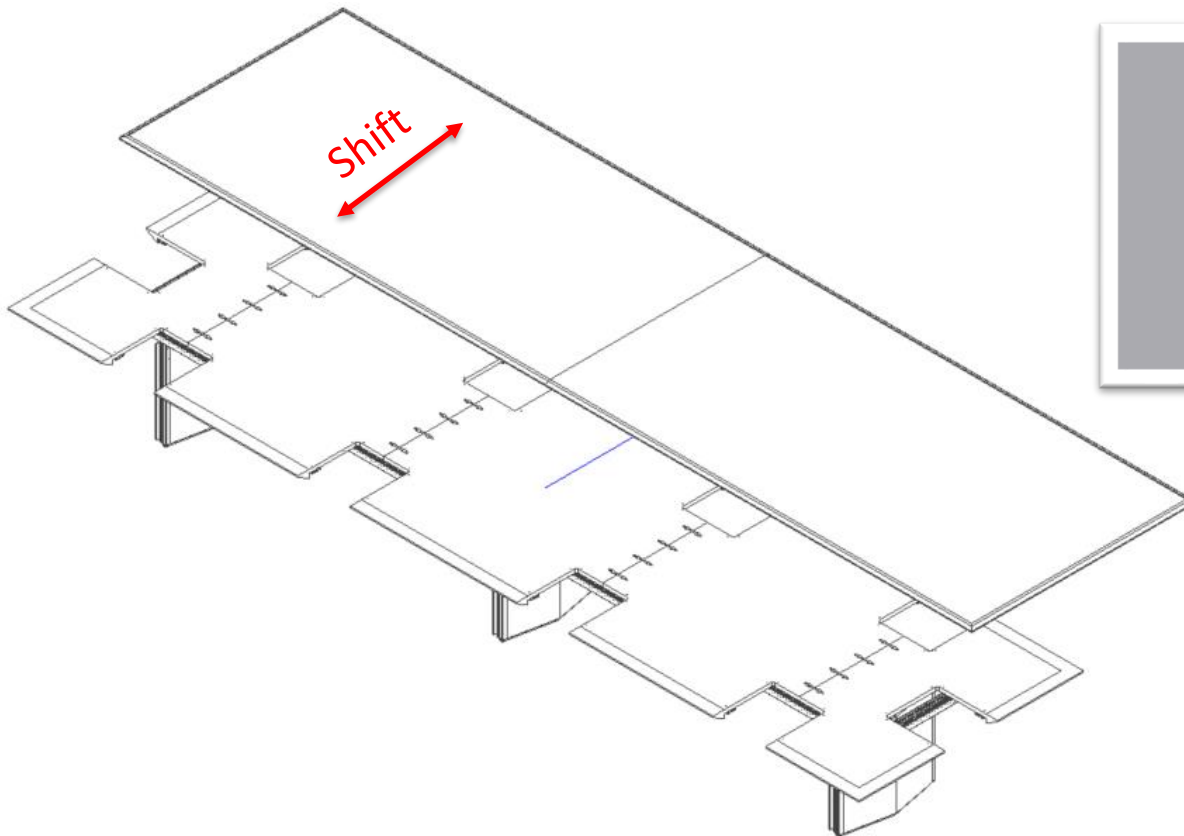

MiniFix Connection

Attaching Veneer Top

- With veneer top centered in place, use the color-coded hardware to attach top to sub top and base.
- Longer Orange Screws get installed through both sub top layers.
- Shorter Red Screws install through upper sub top only.
- Yellow Screws install through base frame.

