

NUCRAFT

Installation Instructions

ID:

Ascari Multi-Piece Credenza



# Before Beginning Installation

- Read through the entire instruction thoroughly
- A minimum of 2 persons is required for this assembly
- These instructions reflect typical assemblies. They may not match your specific configuration.

# Required Tools

- Drill Driver
- Allen Wrenches
- #2 Phillips
- Clamps

# Provided Hardware


- A. Joint Connector #0.25-20 x 1.378 
- B. Joint Connector 0.25-20 
- C. Dog Bone Connector 
- D. Screw #10-12 x 0.75, PHL, PN 
- E. Screw #10-12 x 1.75 PHIL, PN 
- F. Screw #8-15 x 0.75, PH, TR 

# Step 1: Remove Internal Components



- Remove internal components from each case (including drawers, shelves, waste units, etc.)


- \*\*Note: There are two slides located under fridge and trash receptacle drawers\*\*

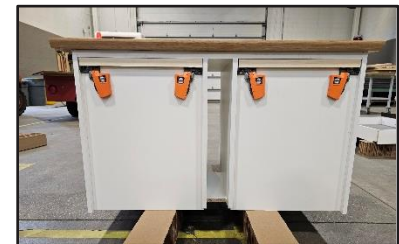

- Drawer slides: Squeeze the orange release clamp and push slide track away from clamp

# Step 2: Flip On Back

- Flip all cases onto their backs within the packaging pallet

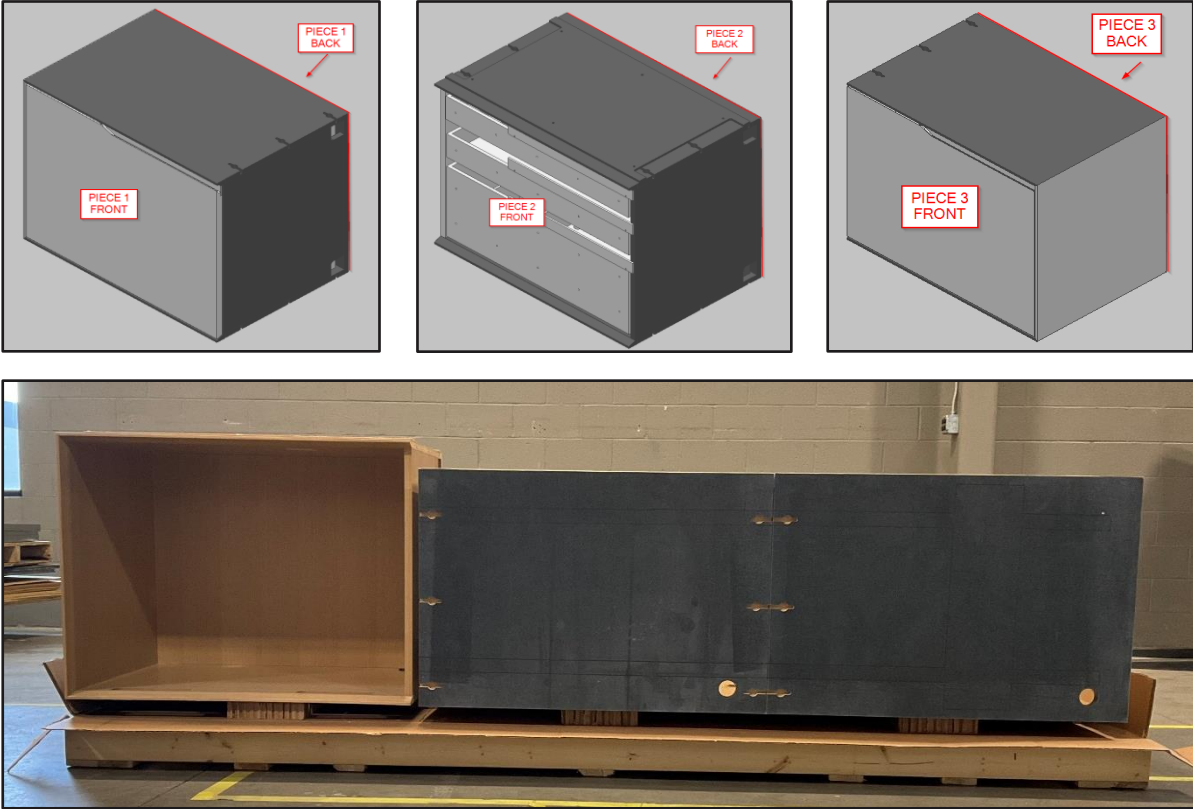

## Step 3: Fasten Cases Together

- Align cases so the tops and bottoms are flush
- Fasten the joint connector bolts on the interior of each case
- Hardware: Joint Connectors - Hardware A AND Hardware B



## Step 4: Join Cases Together

- Fasten dog bone joint connectors in top and bottom
- Hardware: Dog Bones - Hardware C





## Step 5: Attach Base



- Arrange extra cardboard pieces provided as shown




- Rest base on cardboard pieces, align left-side base plate with pilot hole and fasten this screw
- Pivot base on cardboard to align the right-side base plate with pilot hole
  - *\*IF NEEDED\** Loosen bolts that secure base rod to allow for movement of right-side base plate to align with pilot hole
- Then screw in all remaining screws
- Hardware: Screws – Hardware D (Short) AND Hardware E (Long)



## Step 6: Attach Metal Trim

- Install metal trim to top of cases
- Hardware: Screws – Hardware F

\*\*Notes: If order has veneer top, see step 8B before reinstalling internal components (Step 7)\*\*

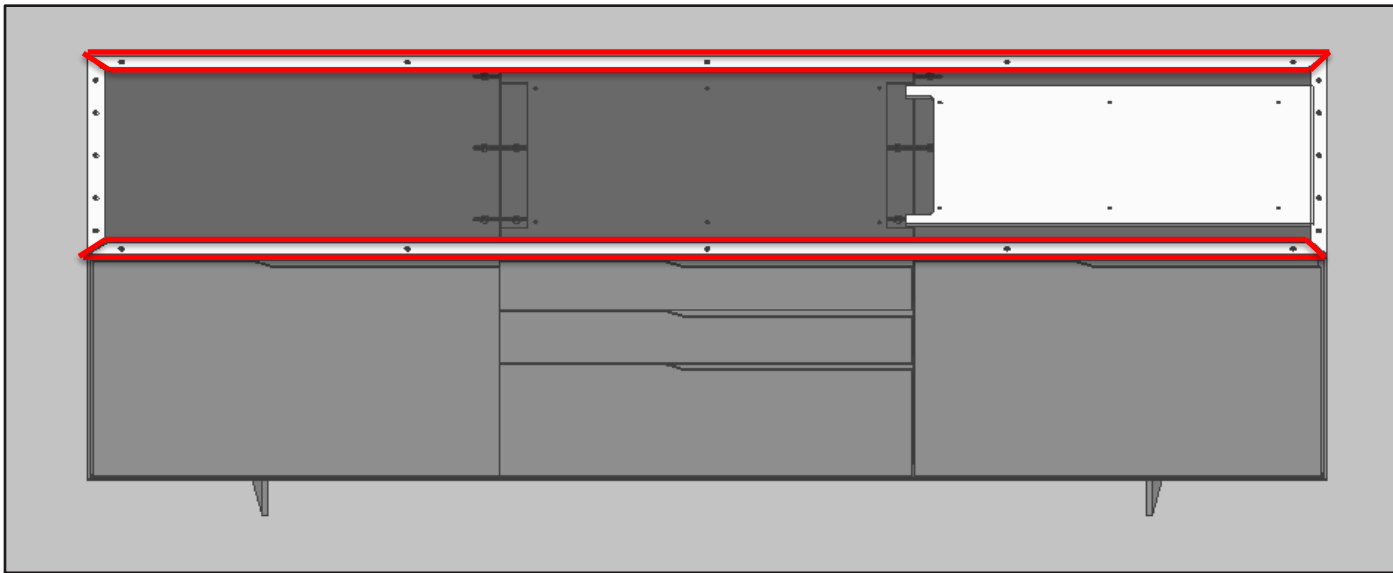

## Step 7: Replace Internal Components

- Flip credenza onto base
- Replace all internal components
  
- **\*\* Notes: \*\***
  - Some components are heavy and can cause the credenza to tip if not careful\*\*
  - If order has veneer top, skip to [Step 8B](#) before completing this step\*\*

## Step 8A: Place Glass/Stone Top

- Lift and place glass/stone top on cases resting it on rubber stoppers



## Step 8B: Place Veneer Top

- Lift and place veneer top on cases
- Fasten top to cases with Hardware X
- Return to [Step 7](#)



## Step 9: Fridge Installation

- If specified, consult fridge instructions provided with fridge front

