

# NUCRAFT

Fleet Installation Instructions

ID:


# Before Beginning Installation

- Read through the entire instruction thoroughly
- A minimum of 2 persons is required for this assembly
- These instructions reflect typical assemblies. They may not match your specific configuration.

# Required Tools


- Drill Driver
- #2 Phillips Bit
- 1/4" Allen Wrench
- Adjustable Wrench

# Fleet C-Leg Nesting

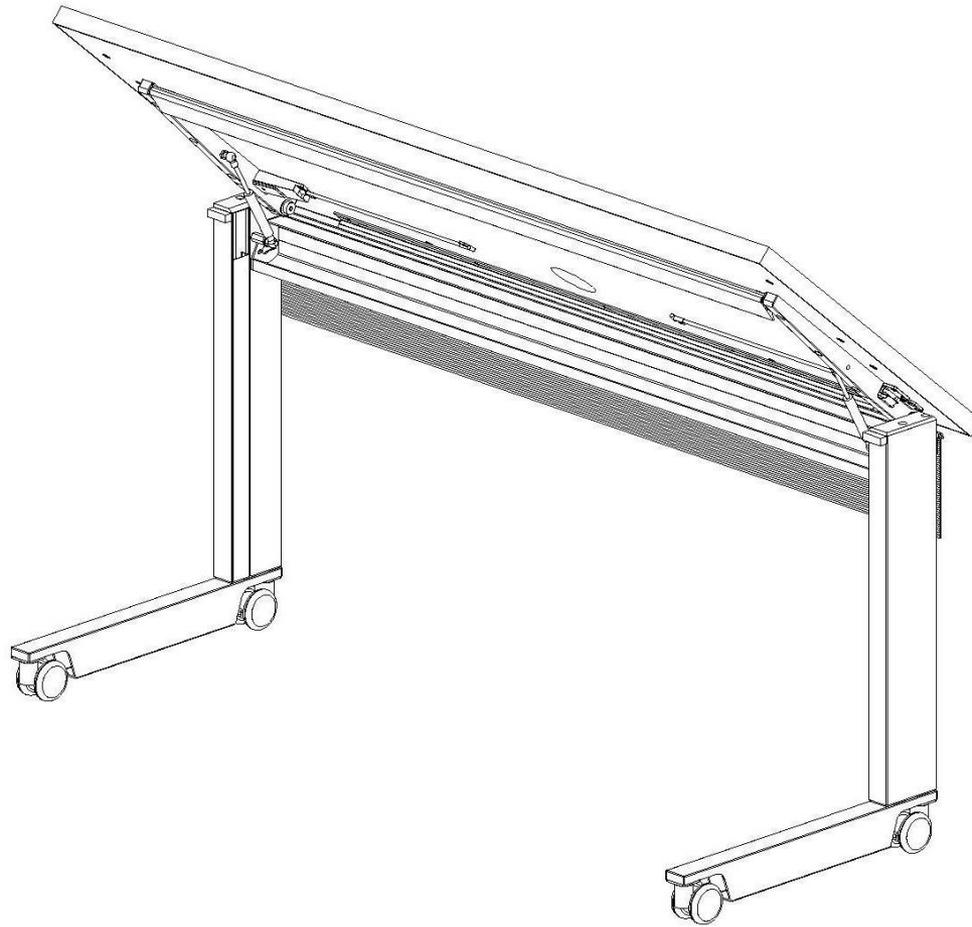


# Fleet C-Leg Exploded

1. Work Surface
2. Leg Assembly
3. Wire Trough
4. Modesty Panel

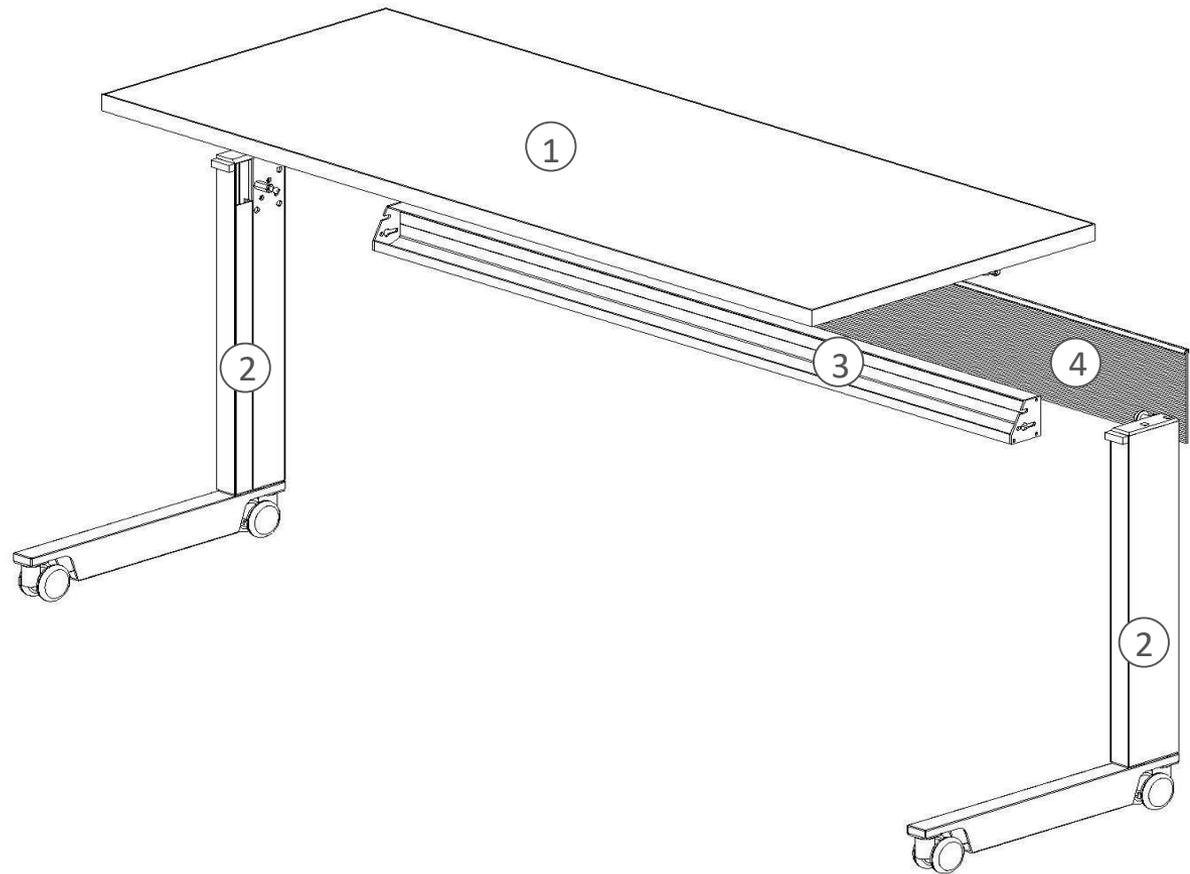


# Fleet T-Leg Nesting

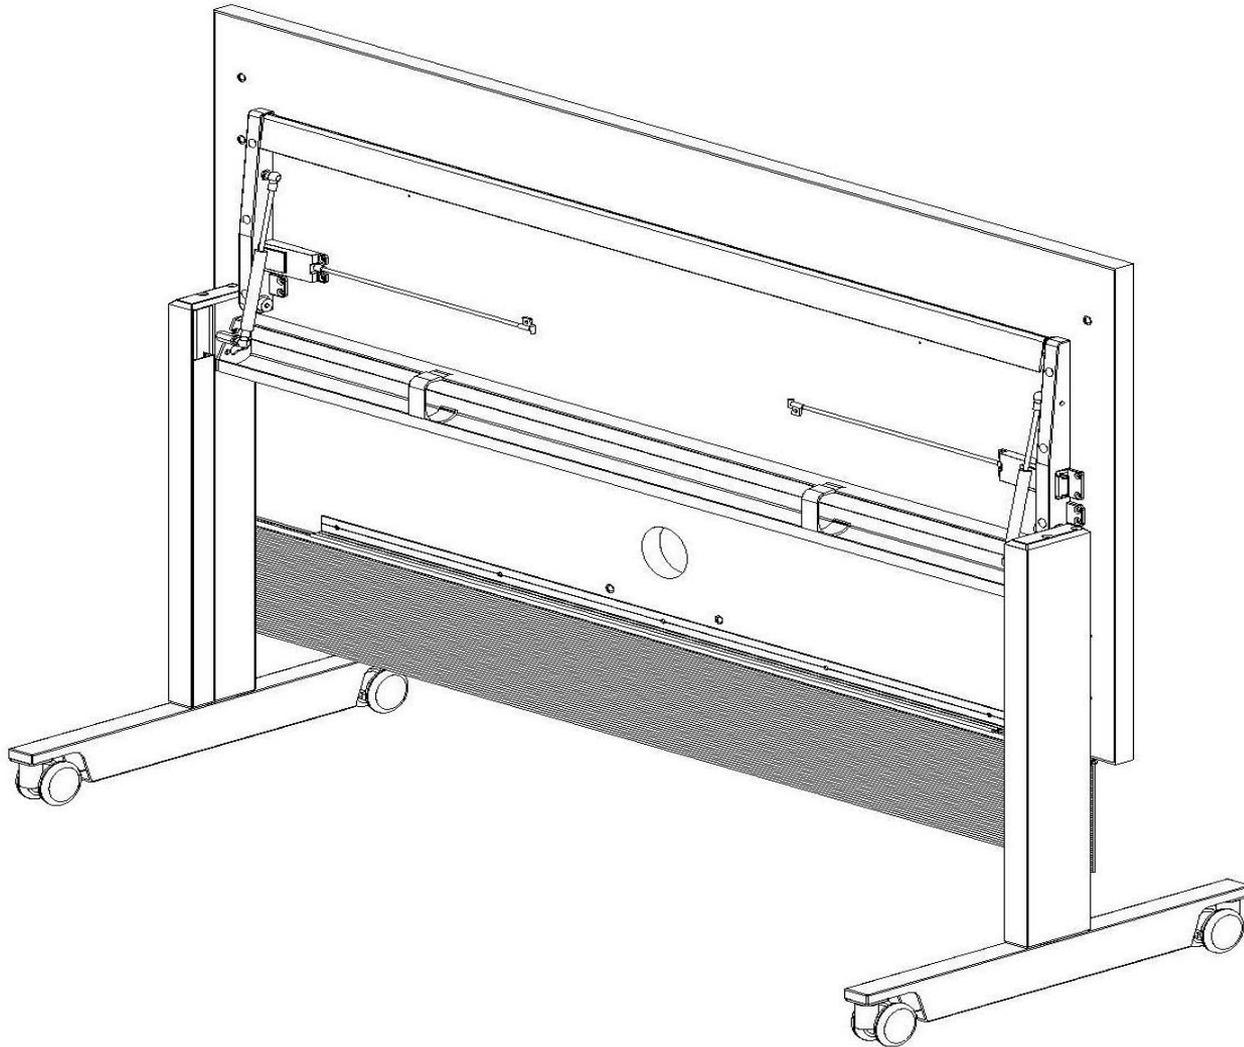




# Fleet T-Leg Exploded

1. Work Surface
2. Leg Assembly
3. Wire Trough
4. Modesty Panel

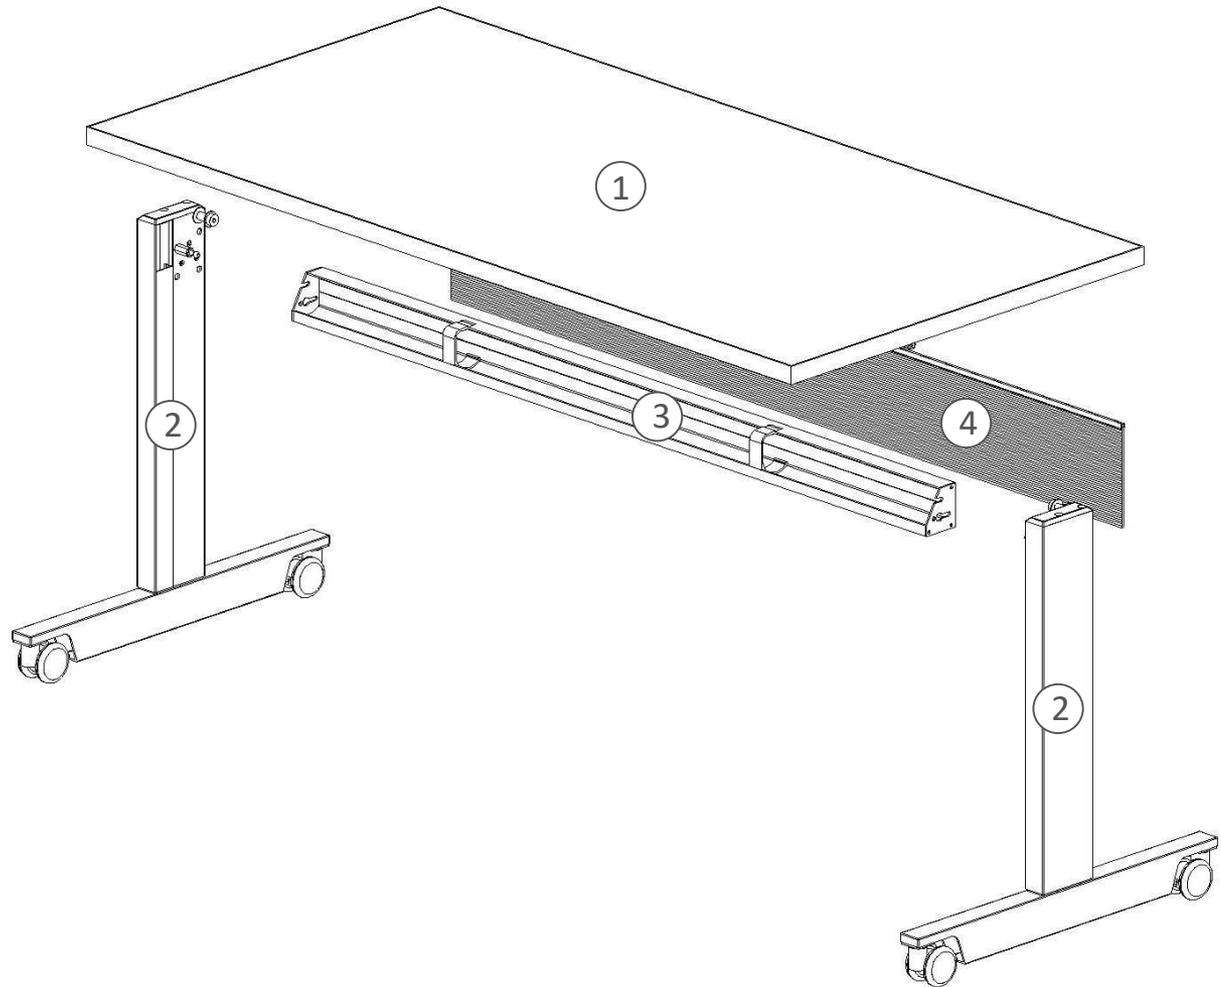


# Step 1: Attaching Wire Trough to Legs

- A group of four screws is located on the top inside of the leg assembly. Remove the bottom left screw, and loosen the two screws on the right.
- Lining up the slots of the wire trough with the 2 right screws, slide the trough into place.
- Re-insert the front screw and tighten all three to secure trough.

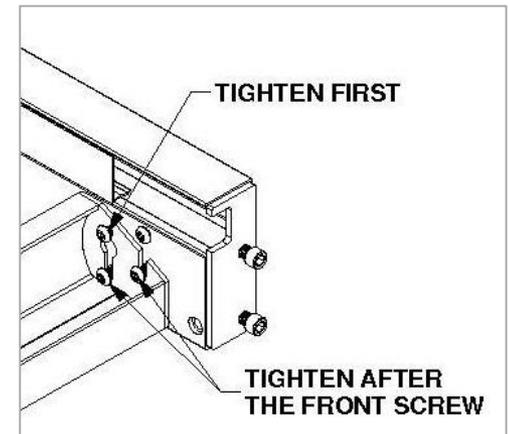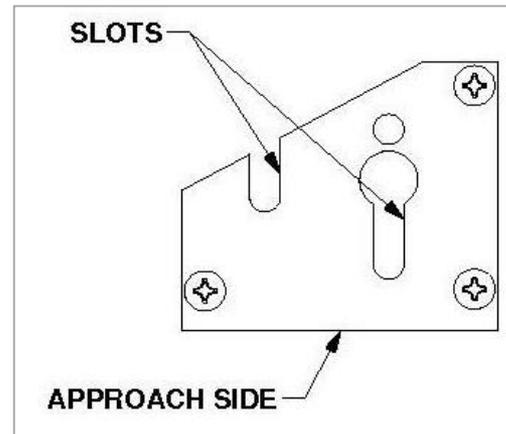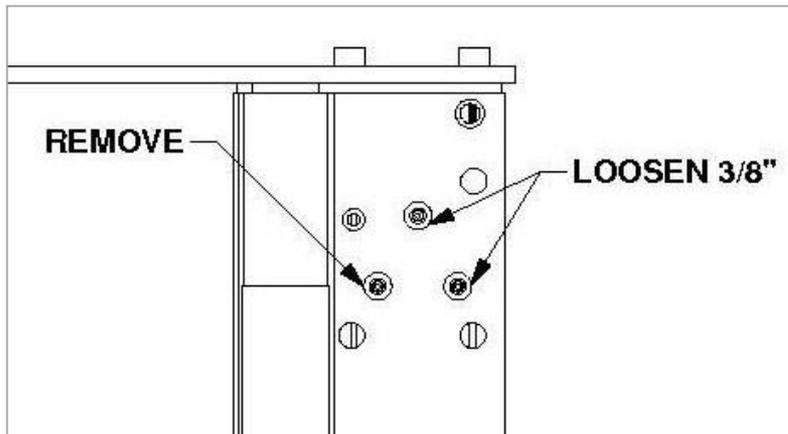


## Step 2: Leg Attachment / Static

- Place the work surface face down on a clean surface.
- Align the holes in the leg top plate with the inserts on the underside of the work surface.
- Using supplied fasteners, secure legs to the work surface.

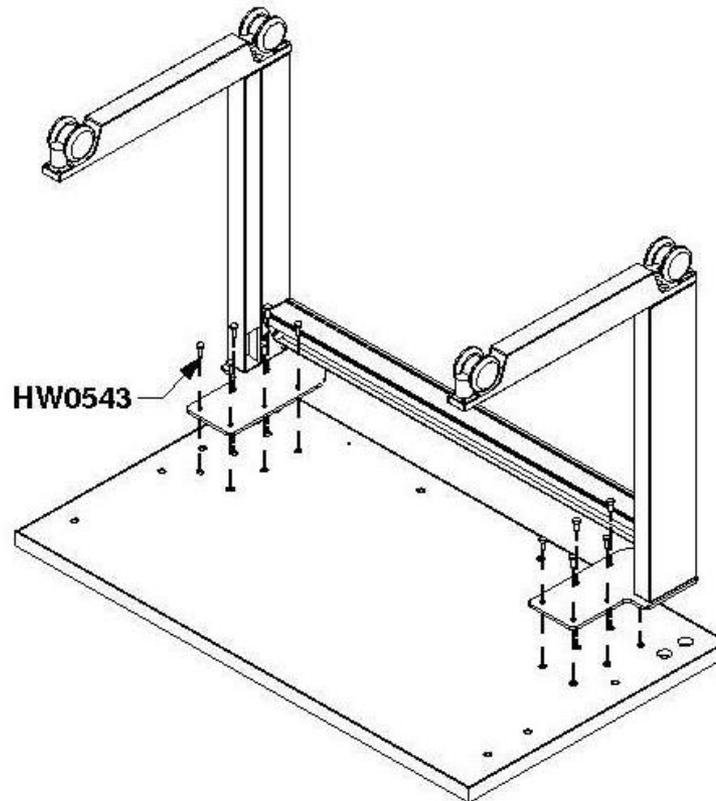


## Step 3: Leg Attachment / Nesting

- Place the work surface face down on a clean surface.
- Remove the shoulder bolts and acetyl bearings from the legs. Align the holes in the legs with the thru holes in the nesting arms.
- Re-attach the shoulder bolt, making sure there is a bearing on each side of the nesting arm.

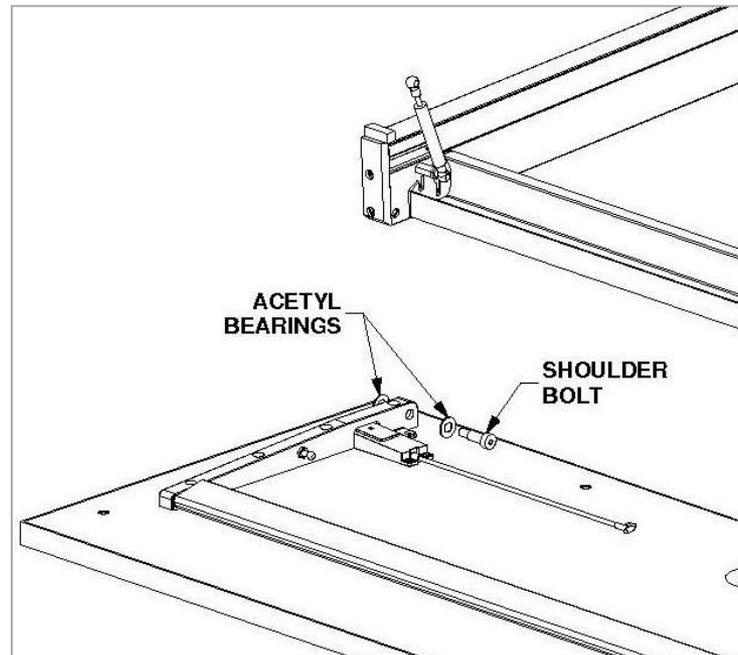

## Step 3: Leg Attachment / Nesting

- With the table still on the floor, pivot the legs up until the unattached end of the gas cylinder is aligned with the ball socket standoff on the leg.
- Snap the end of the gas cylinder onto the ball socket by applying direct pressure.
- Continue closing the legs until they latch into place. Flip the table to its upright position.

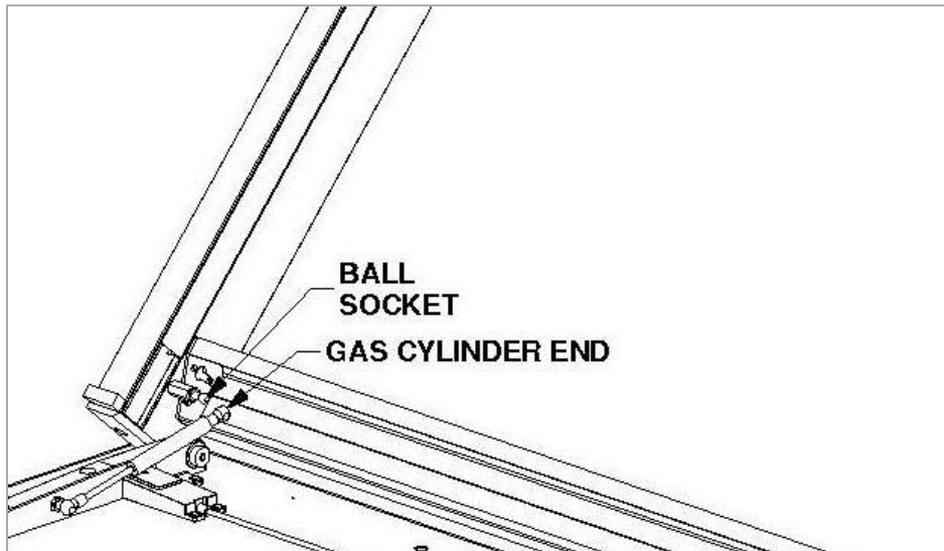

## Step 4: Modesty Panel Attachment

- Attach one of the hinge pins to the underside of the table. Be sure the pin is oriented to have the screw holes away from the edge of the surface.
- Slide one end of the modesty panel onto the attached hinge pin. Careful to hold the panel level.
- Slide the remaining pin into the groove on the modesty panel and attach to the bottom of the work surface.

